


# FLOW INDICATOR

Rhythmic rising and falling indicates positive flow. Air bubbles indicate chemical has exhausted. Stationary ball indicates no flow. Problem could be: lost prime, stopped motor, plugged injection fitting, faulty tube or diaphragm, plugged or dirty footvalve filter or chemical has been exhausted for a lengthy period of time.

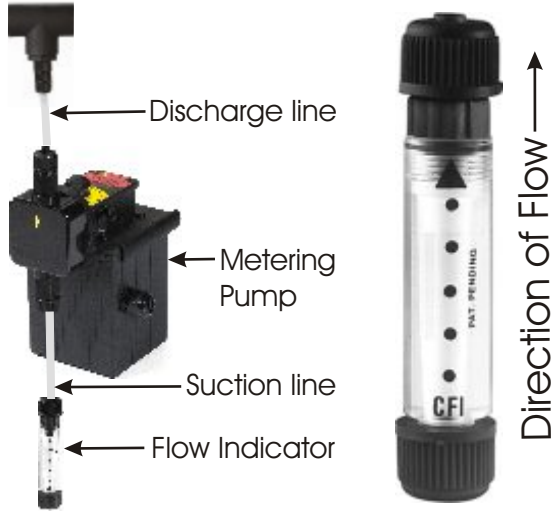


**Blue-White**  
Industries, Ltd.

5300 Business Dr.  
Huntington Beach, CA  
714-893-8529

80000-034

# FLOW INDICATOR

Rhythmic rising and falling indicates positive flow. Air bubbles indicate chemical has exhausted. Stationary ball indicates no flow. Problem could be: lost prime, stopped motor, plugged injection fitting, faulty tube or diaphragm, plugged or dirty footvalve filter or chemical has been exhausted for a lengthy period of time.

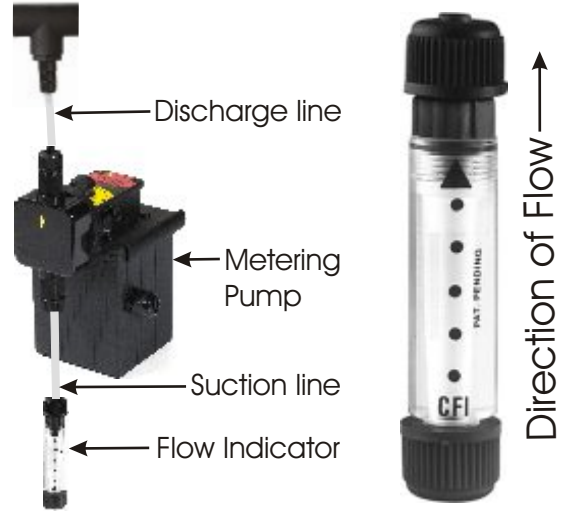


**Blue-White**  
Industries, Ltd.

5300 Business Dr.  
Huntington Beach, CA  
714-893-8529

80000-034

# FLOW INDICATOR

Rhythmic rising and falling indicates positive flow. Air bubbles indicate chemical has exhausted. Stationary ball indicates no flow. Problem could be: lost prime, stopped motor, plugged injection fitting, faulty tube or diaphragm, plugged or dirty footvalve filter or chemical has been exhausted for a lengthy period of time.

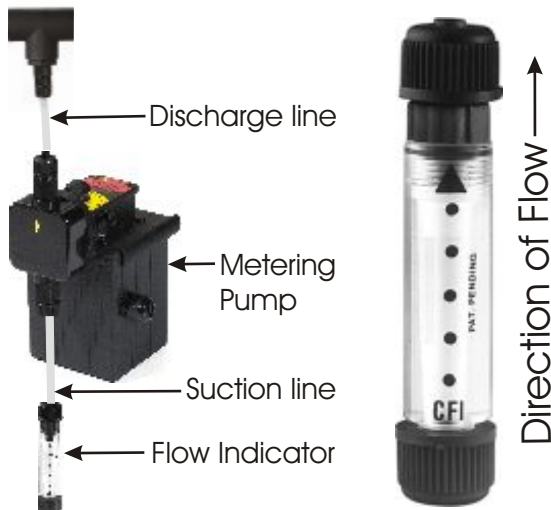


**Blue-White**  
Industries, Ltd.

5300 Business Dr.  
Huntington Beach, CA  
714-893-8529

80000-034

# FLOW INDICATOR

Rhythmic rising and falling indicates positive flow. Air bubbles indicate chemical has exhausted. Stationary ball indicates no flow. Problem could be: lost prime, stopped motor, plugged injection fitting, faulty tube or diaphragm, plugged or dirty footvalve filter or chemical has been exhausted for a lengthy period of time.

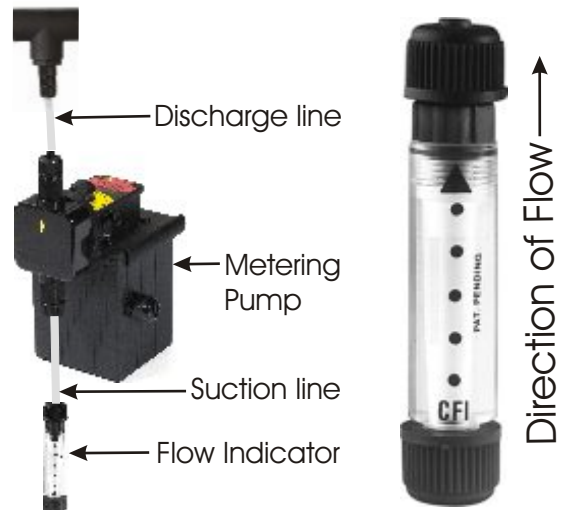

**Blue-White**  
Industries, Ltd.

5300 Business Dr.  
Huntington Beach, CA  
714-893-8529

80000-034