

Congratulations!

You are the new owner of the re-designed A-100N FLEXFLO Tube Assembly.

Follow the steps on the back to ensure your tubing will fit properly with your pump.



Uncomplicated.

Tube assemblies are now stamped with simple reorder number.



Increased Performance.

Higher accuracies on circumference of new pump head (accurate feed rates).
Larger internal adapter ports for higher viscosities.




Increased Strength.


A stronger pump head adapter plate which holds adapters in place.
Stronger/beefy tube adapters made of natural PVDF.

Steps to Identify your Pump:

Step 1) Which Pump Head to you have?

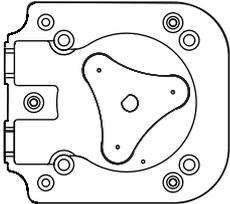

A) New Style

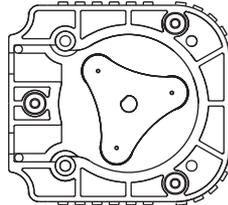


B) Old Style

If you answered A, you have the correct tube, follow proper tube installation procedures. See Instruction Manual.

If you answered B, move on to Step 2.

NOTE: New Style began shipping September 1, 2015

Step 2) Does your pump have an Orange Adhesive Spacer Pad (90012-399) adhered to the side of the pump head?

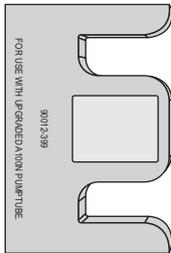

Adhesive Pad
(PN 90012-399)

If you answered YES, you have the correct tube, follow proper tube installation procedures. See Instruction Manual.

If you answered NO, move on to Step 3.

Step 3) Order a Retro-fit Kit (72000-550) to make your newly purchased Tube Assembly compatible with your old style Pump Head.

Retro-fit Kit (PN 72000-550) REQUIRED for use of NEW Tube Assembly on OLD Pump Head.

Kit includes Adhesive Spacer Pad (PN 90012-399) and Clear Cover (PN 71000-156)

Order Upgrade Kit:

This Kit (72000-550) can be purchased through your distributor or online at:

www.bluewhiteparts.com search for 72000-550

COST: \$6.00 USD

** Placement instructions shipped with Retro-fit Kit.*

Download this document:

<http://blue-white.com/blue-white-products/a-100n-flexflo-peristaltic-pump/>

